

Cleaning & Maintaining

1. During the transportation or installation, do not pull the pipe or hold accessories to avoid the water leakage.
2. After long time use, if there are some dirt on product's surface, wipe it off gently by a soft towel stained with mild detergent; for the metal parts, polish it with some car wax by a towel, which brings out a refreshing appearance.
3. Scale deposit can be wiped off with warm citric acid or vinegar by a soft cloth.
4. Don't clean the tub and accessories with hard or coarse material to avoid any scratches.
5. Don't clean the tub and accessories with gasoline to avoid any damages.
6. It is not recommended to leave water in the tub for a long time or use this tub for washing purpose. Pls drain off the water after the bath and disconnect the power supply.
7. There should be sufficient power supply and wires should be safely grounded.
8. For your safty, a professional technician is necessary to ensure earthing wire be well grounded and a RCCB fitted during installation.


Bremen

Instructions of Installation and Use

www.schonberg-bathrooms.com



Dear Customer,
 Thank you for choosing our product. For your safe concern, please take a few minutes to read this manual before installation and use.

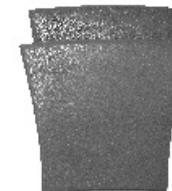

Please make sure all accessories are in the package
 (Bathtub 1set Accessory box 2pcs Pillow 2pcs)


Pillow

WARNING

1. For a person who has heart trouble, high blood pressure & sugar diabetes should not take a steam shower or bath when feeling sick. (The kid is suggested to be accompanied by an adult when taking a bath)
2. Don't take a bath alone after drinking wine with alcohol or excess sports.
3. The water temperature should be below 45°C during shower and the recommended temperature is 30°C-38°C.
4. Don't take a bath for a long time. Recommended time: 15-21minutes.
5. All the information in this instruction are subject to change without prior notice.
6. Settings, configurations and details of the products are subject to be changed or upgraded without prior notice.
7. For the maintenance, please contact the technicians appointed by the dealer and don't disassemble and fix by yourself, or the supplier will be free from any consequences that may occur.




Accessory box 1:
 Faucet 1 pcs

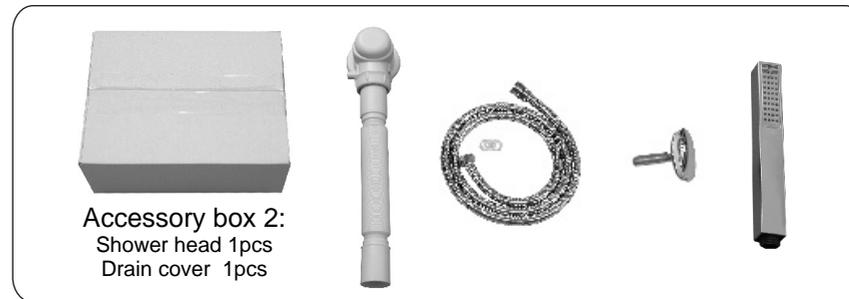

Accessory box 2:
 Shower head 1pcs
 Drain cover 1pcs

Installation Tools:(no included)

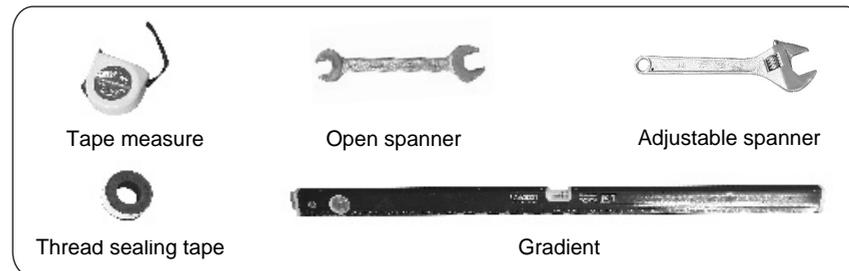

Tape measure

Open spanner

Adjustable spanner

Thread sealing tape


Gradient

CONTENTS:


Preparations _____ Page2
 Installation Process _____ Page4
 Instruction of Using Our Products _____ Page8

Preparations

Install 2 water supply holes (one for cold and another for hot), 1 electrical outlet, 1 drain hole (diameter $\geq 5\text{cm}$) in advance. Do as the pic. shows:

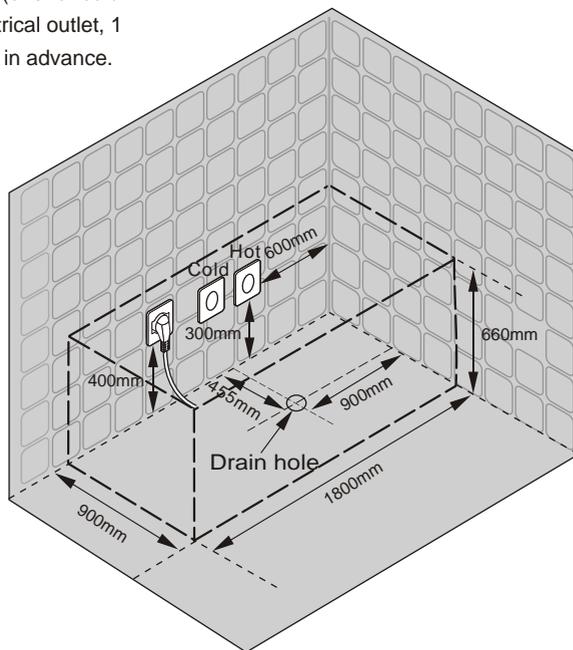


MODEL: MT-RT1804
SIZE: 1800mmX900mmX660mm

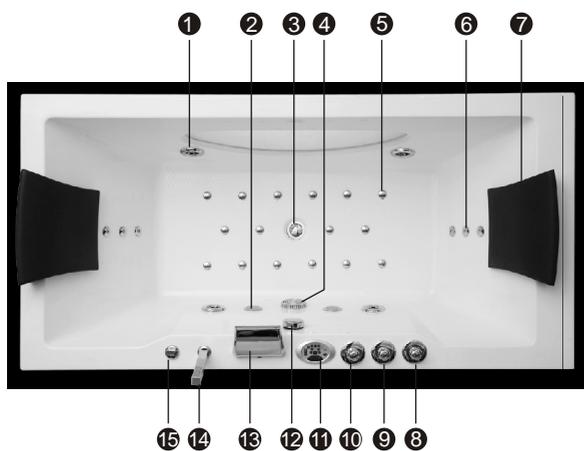


- ① Big Water Jets
- ② Light
- ③ Drainer
- ④ Drainer Switch
- ⑤ Air Jets
- ⑥ Small Jets
- ⑦ Pillow
- ⑧ Hot Water Handle
- ⑨ Switch Handle
- ⑩ Cold Water Handle
- ⑪ Control Panel
- ⑫ Drainer Switch
- ⑬ Waterfall
- ⑭ Shower Head
- ⑮ Volume Control

Installation Process

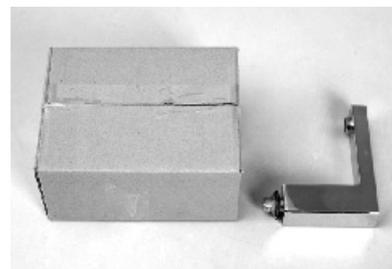

1. Open the accessory box 1 as pic. shows

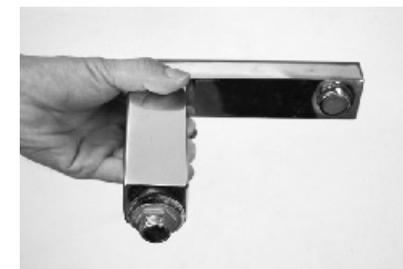


2. Remove the screw of inlet faucet



3. Put the inlet faucet into the hole of the bathtub



4. Put the rubber from below, and use spanner to screw it

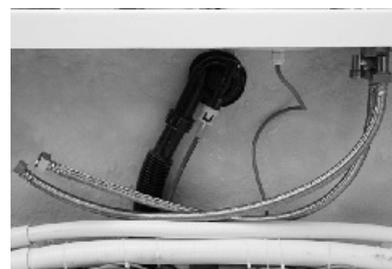

5. Distinguish the water pipes of faucet



6. Use spanner to screw the tie in.

Installation Process



1. Open the accessory box 2 as pic. shows




2. Put the shower head into the bathtub in right position as pic. shows



7. Make the thread sealing tape smooth




8. Fasten the drain tube

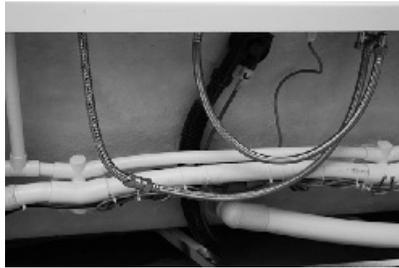


3. Distinguish water inlet pipe



4. Screw it

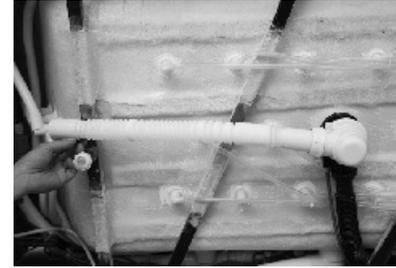

9. Put downcomer into the drain hole on the ground

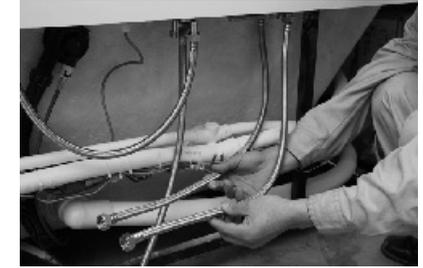

10. Drain sewage of the tube, then connect the cold and hot water pipe separately




5. Side up the bathtub, then install downcomer



6. Use thread sealing tape to wrap around the drain hole




11. Put plugs into the drain hole

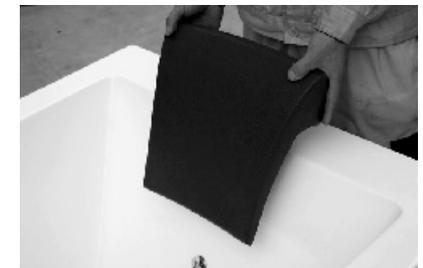

12. Install pillow


13. Seal the barhtub edge by silicon glue as follows

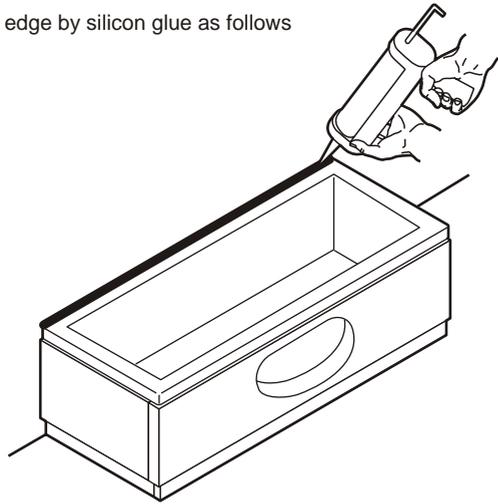

Unique Point



1. The creepage protector will automatically cut off the circuit if the current is too high.

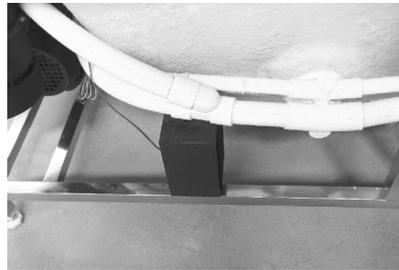

2. Stereo speaker




3. Volume control




4. Waste water free piping system

System Installation Sketch

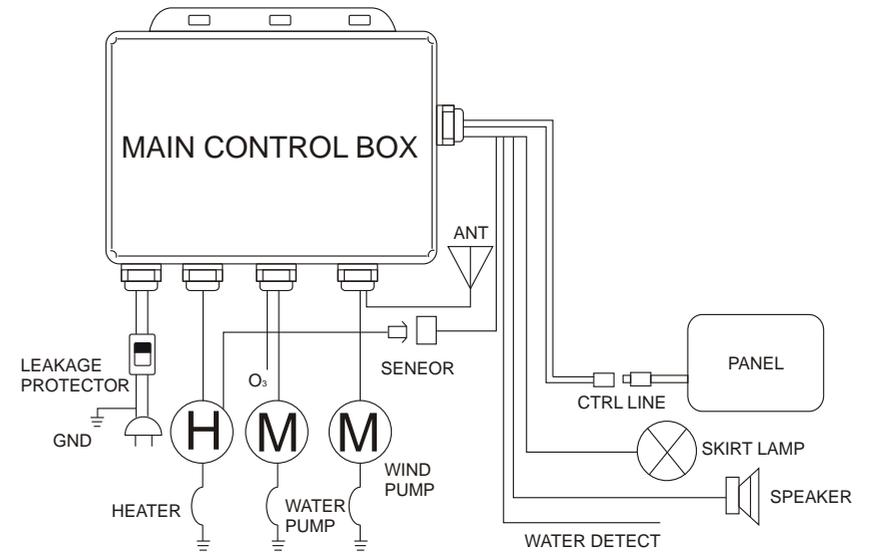

Exterior Description

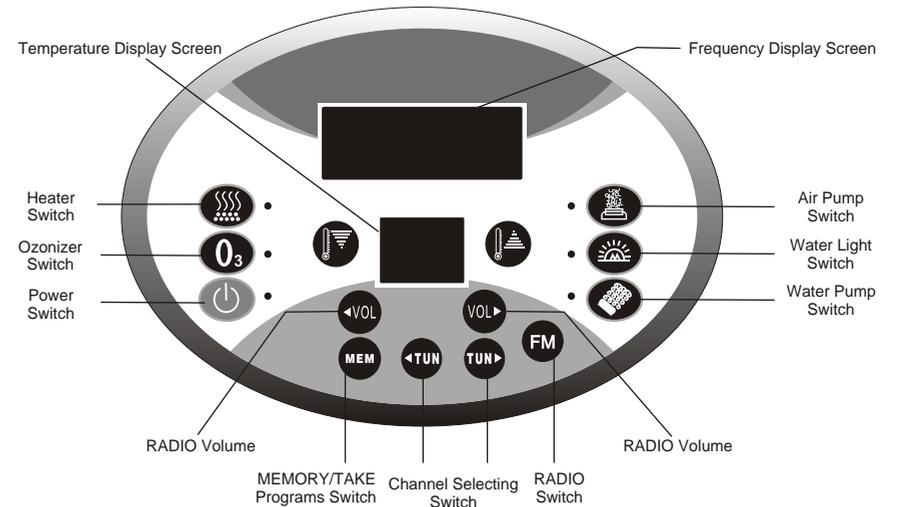

Run Condition

1. Power: AC110V/220V
2. Underwater Lamp: AC12V
3. Water Pump: AC110V/220V
4. Heater: AC110V/220V
5. Air Pump: AC110V/220V

Operation Manual

1. (⏻) Power on/off key, Other function can be used only when power is on.
2. (O³) O³ on/off key
Other key will be no action except for the power key when the O³ is on.
O³ will be stopped in 15 minutes when O³ is on.
O³ key will be no action when other function key is pressed.
O³ key can be action only when the power key is off and then is on .
3. (🔥) Heater control
The heater can be work normally only when the water pump is open.
(🌡️) Temperature can be set when the heater key is on .
Temperature can be adjusted from 10°C to 50°C.
Temperature display window will flash when the temperature is set.
And will display current water temperature in five seconds.
4. (FM) FM Radio on/off key
(🔊) Radio volume up and down key.
They can select mem channel when mem key is on the select station state or on the mem store state.
(⏮️ ⏭️) They can turn the radio step by step when they are pressed on short time.
They can search the station when they are pressed on long time.
(MEM) It can select mem channel when it is pressed on short time.
It can be the storing station state when, it is pressed on long time.
And it can store station when it is pressed again.
5. (🌊) Air pump on/off key
Air pump can be opened only when the water level is at the set position.
And will be automatically closed when the water level is low.
6. (🔧) Water pump on/off key
Water pump can be opened only when the water level is at the set position.
And will be automatically closed when the water level is low.
7. (💡) Underwater lamp on/off key
8. Outlet valve control, it will outlet water for 3 minutes after 10 minutes.
When it detects the anhydrous state from the having water state.

Precautions:

1. The installation should be carried out by a qualified technician and creepage protector should be installed in the place easily to be controlled.
2. The electronic parts should be well grounded, otherwise, the manufacturer will not be liable for any loss or consequences occurred.
3. The load capability of the power supply should be considered during installation, or it affects the normal operation of the product or may lead to accident!
4. For any functions can not be activated through the ways mentioned above, please contact a certified technicians or local dealer.
5. If you don't use the product for a long time, please disconnect the main power supply.
6. Parts containing live parts, except parts supplied with safety extra-low voltage not exceeding 12V, must be inaccessible to a person in the bath.
7. Earthed appliances must be permanently connected to fixed wiring.
8. Parts incorporating electrical components, except remote control devices, must be located or fixed so that they cannot fall into the bath.
9. The appliance should be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30mA.
10. Make sure that the wire is laid correctly.
11. Make sure that the equipotential connection is done correctly.
12. The means having a contact at least 3.0mm separation in all poles that provide full disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Earthing Marking



Equipotential



Switch Marking