


Stonebath installation guide

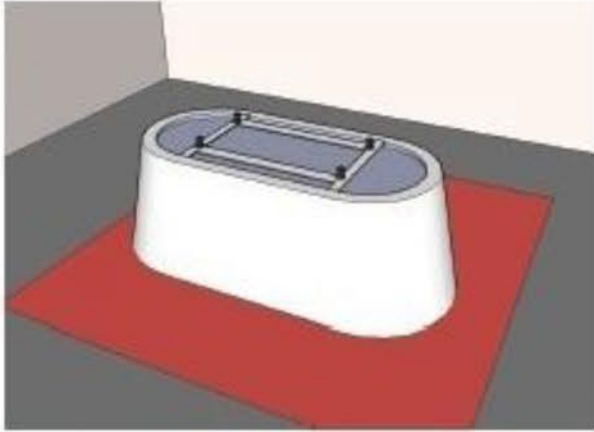


- A** Laying the bath on a protective cover adjust legs so that they are at the same level with the base of the bath.



- B** - Place bath in required position.
- Adjust feet to make the bath level using a spirit level.



- C** Use a light pencil to mark the desired location of the bath
Tilt the bath away from the desired place for the preparation step D

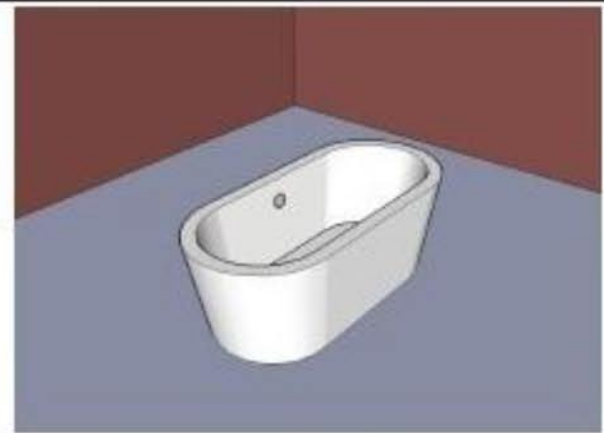

- D** - Connect the siphon by using silicone;
- place the bath at the desired position.
- Silicone around the bath and let it dry for 24 hours.